

# 5.4 COREL DRAW SETTINGS FOR WILLY LASERLABEL

## Download File from the Willy website


1. Connect to the Willy website at the address: [www.willyit.com](http://www.willyit.com).  
Go to the **Download Area** and find the **Software for Laserlabel** section




2. Select the file to download and make a click on the link **Download**.



Decompress the downloaded file, by using a software for the file archiving, like Winzip (downloadable freeware from internet).

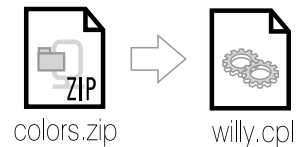


3-Please make sure that the Windows Numerator is installed into your Computer.  
Move the **“Willy.cpl”** file into the **“Willy”** folder, previously created by the Windows numerator installation.

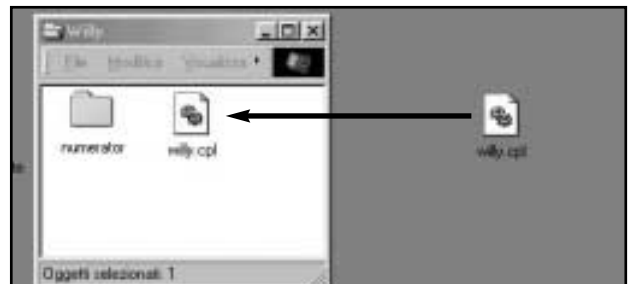


## Installation from floppy disk (included in the instructions manual)

Please make sure that the Windows Numerator is installed into your Computer.

- Insert the floppy disk named “Willy Custom colors in the drive A:
- Drag the **“Willy.cpl”** file from the floppy into the **“Willy”** folder, previously created by the Windows numerator installation.

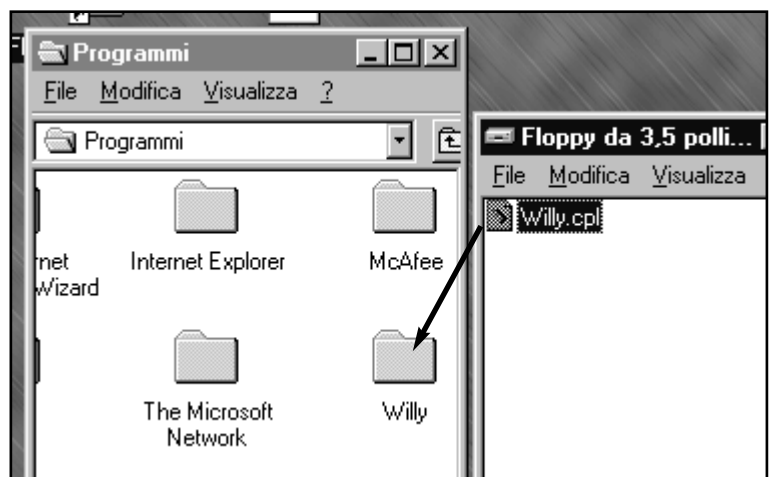


## HOW TO LOAD THE CUSTOM PALETTE WILLY

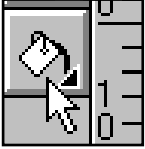

### COREL 5/6 USERS:

Make a click upon the **FILL** button in the toolbar. Click on the “Fill Color” button.

In the next window, make a click upon the arrow-button on the Custom Palette section. Choose **Open** from the next menu.

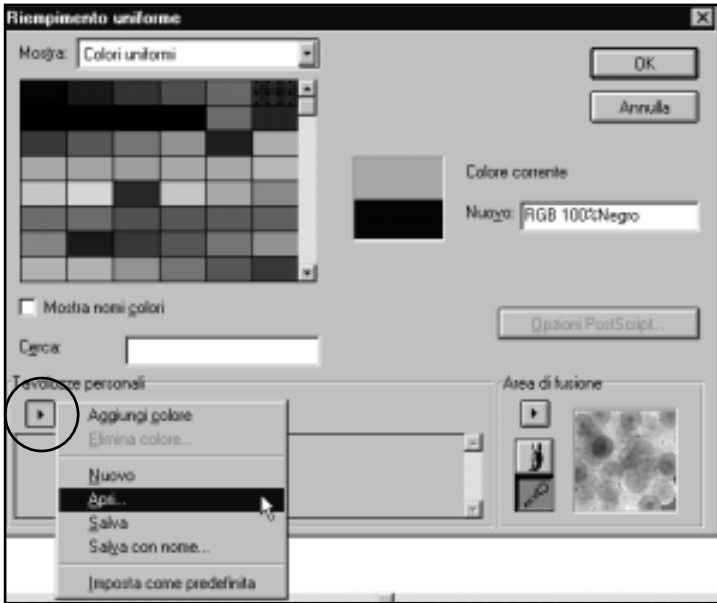



By means of the cascade menu “Look In:” chose the sub-directory **WILLY** in the directory “Programs”.

Select the **willy.cpl** file and click on the **Open** button.

A new Palette, will substitute the Corel’s default one.



Click on OK to confirm all these operations.

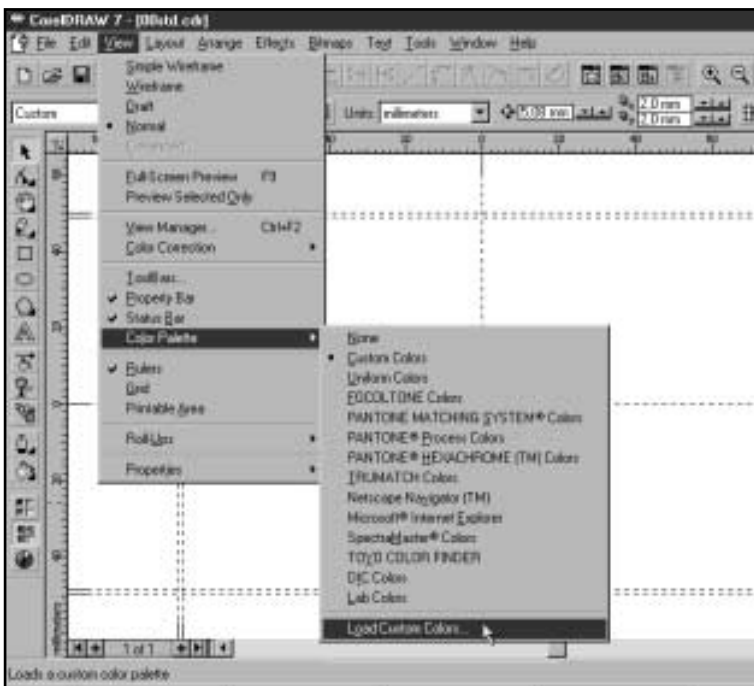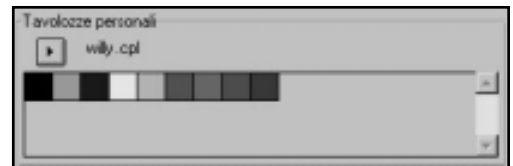

### FOR COREL 7 USERS


Choose the option **Color Palette**, from the **VIEW** menu; then select **Load Custom Colors**.

By using the cascade window “Look In:” search the directory **WILLY**, that can be found in the **Program Files** folder.

Select the **willy.cpl** file, then click on **Open**.

**FOR COREL 8 USERS:**

Choose the option **Color Palette**, from the **VIEW** menu; then select **Load Custom Colors**. In the right side of the working area, the program will show the available colour palettes. Click on the **Load** button. By using the cascade window “Look In:” search the directory **WILLY**, that can be found in the **Program Files** folder. Select the **willy.cpl** file, then click on **Open**. A new Palette, will substitute the Corel’s default one.


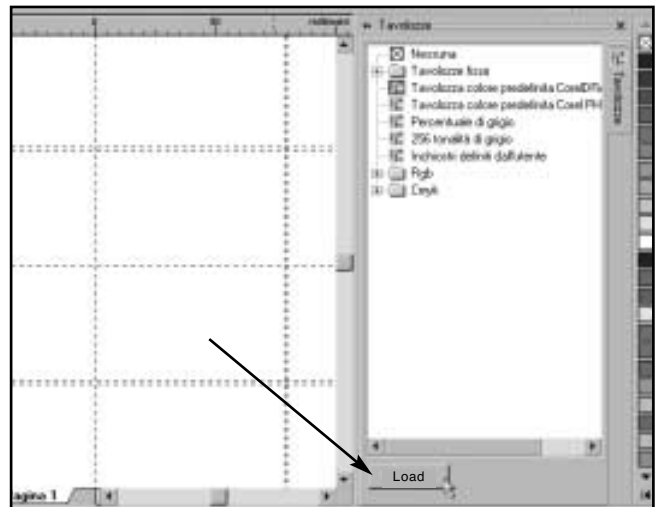



**For COREL 9 users:**

Choose the option **Tavolozza Colore (COLOR PALETTE)** from the menu **FINESTRE,(WINDOWS)**. Then select **Apri tavolozza (OPEN PALETTE)**.



By using the cascade window “Look In:” search the directory **WILLY**, that can be found in the **Program Files** folder. Select the **willy.cpl** file, then click on **Open**.

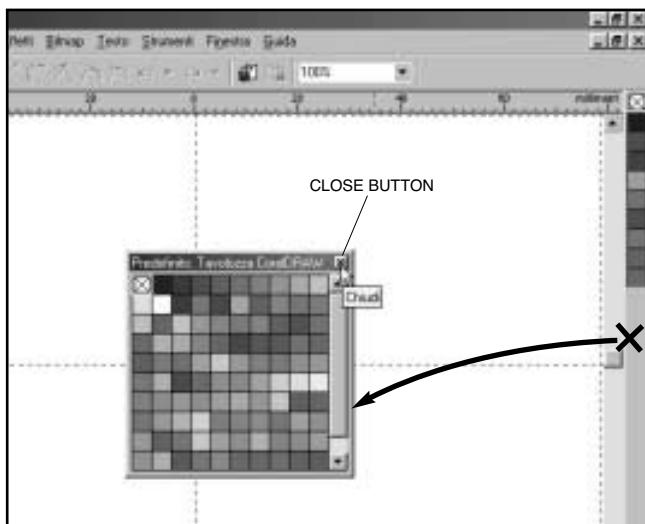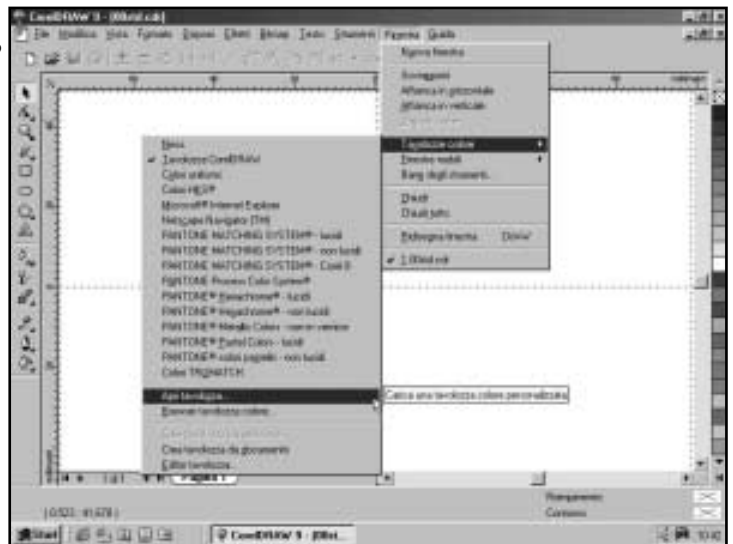

 To remove the default Corel Color Palette, operate as follow:



Move the default Corel Color Palette on the work area, in order to convert it as a window.

Make a click on the **CLOSE WINDOW** button to remove the palette.

# 5.7 PROFILE SAVING

## EXPORT OF THE DRAWING FOR THE LASERLABEL:

- Select the control **EXPORT** from the toolbar commands.

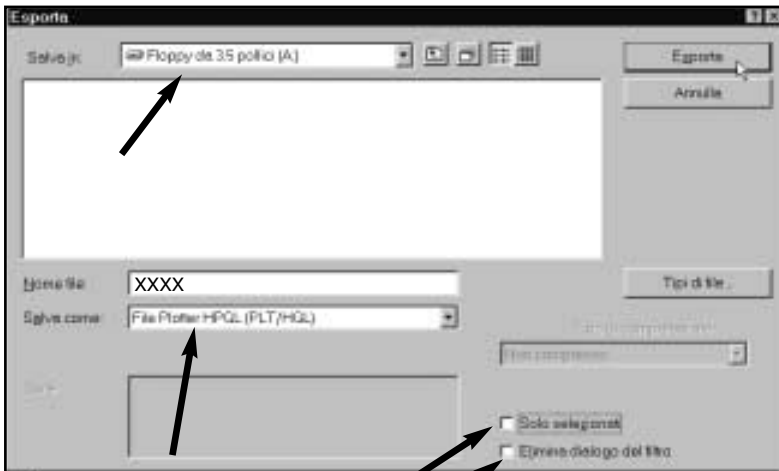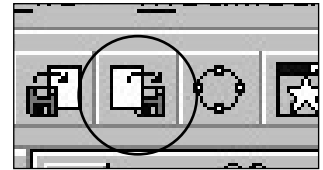


- Select the **3,5” Floppy unit (A:)** as destination (fig. 2).

- Type in the name of the file.
- Select **HPGL Plotter (.plt)** format.
- Check that the options “Selected Only” (Solo selezionati) and “Suppress filter dialog” (Elimina dialogo del filtro) are deactivated.
- Click the **Export** Button.




**ATTENTION!** Do not use odd characters to enter the names of the files which will then be read by the Laserlabel. E.g.: : / = @ “ ‘ ç § . ; : are not correct. - + \_ are correct.

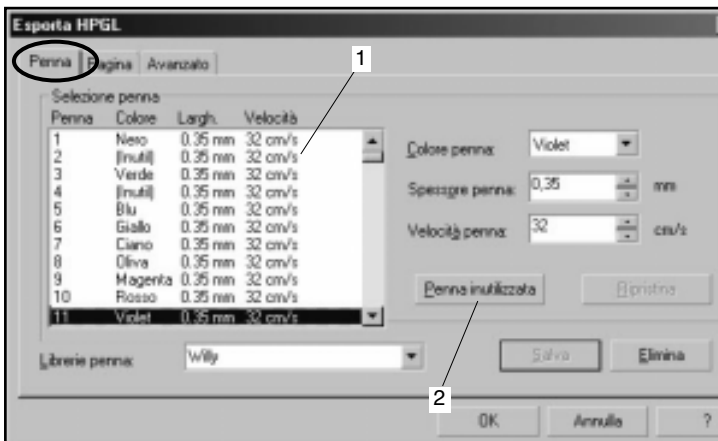

The first time that a profile is exported it will be necessary to create a new library of personalised pens based on the WILLY colours. Once they have been memorised they will be used by Corel Draw also for the following exportations. Set the pens assigning the colours as in the positions in the pen list (1) in the figure alongside.

Disable the pens 2 and 4 by selecting them from the list and click on **Unused Pens** (Penna Inutilizzata) (2) .

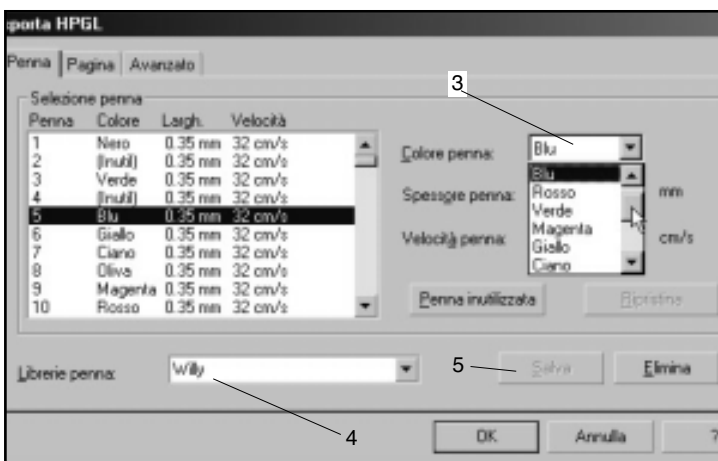


To set up the pens select the desired position and assign the colour choosing from the list “Pen Colours” (Colore Penna) (3).

Do not assign any colour of those included in the list to pens 8 - Olive Green and 11 -Violet to assign the pens to these colours proceed as follows...



Select the option **Personal** (Personale) in the colour list (3).

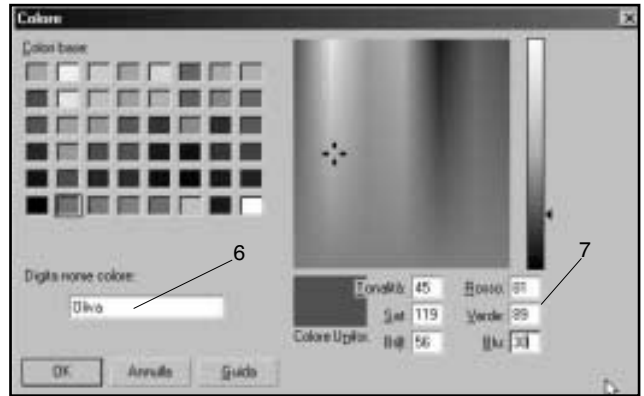


Type the name of the colour in the field (6) to be inserted in the pen list.  
Assign the values **RGB** for the colours (7) as reported here below:

<b>Olive Green</b>	=R81	G89	B30
<b>Violet</b>	=R153	G0	B102

Click on **OK** to confirm the operation.

Memorise the personal library giving it the name **WILLY** (4) and pressing the **SAVE** (Salva) button (5).

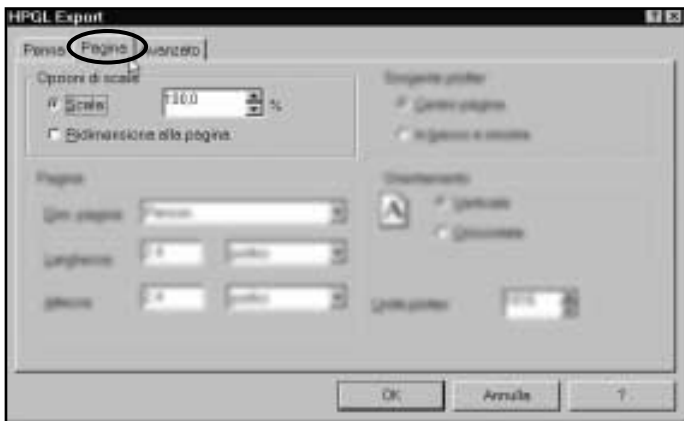

Select **"Page"**(Pagina).  
Check that the scale is set at 100%.



Select **"Advanced"** (Avanzato).  
**Keep the option "No width or velocity commands" selected.**

Once all the operations are complete click on **"OK"** to confirm and export the file onto the floppy disk.

**Attention! Use 1.44 Mb disks DOS FORMATTED only.**



**CHECK THESE SETTINGS WHENEVER EXPORTING A NEW PROFILE.**